How to Make a FIRMette

There are a few options to obtain a FIRMette. This document will step through three methods.

Options

- 1. FEMA's How to Find Your FIRM and Make a FIRMette
 - a. <u>https://www.fema.gov/sites/default/files/documents/fema_how-find-your-</u> firm-make-firmette.pdf
- 2. FEMA Flood Map Service Center
 - a <u>https://msc.fema.gov/portal/home</u>
- 3. FEMA's National Flood Hazard Layer (NFHL) Viewer
 - a. https://msc.fema.gov/nfhl


Option 1 – FEMA's How to Find Your FIRM and Make a FIRMette

- 1. Navigate to <u>https://www.fema.gov/sites/default/files/documents/fema_how-find-your-firm-make-firmette.pdf</u>.
- 2. This document will step through finding your FIRM and making a FIRMette.





Option 2 – Using the FEMA Flood Map Service Center

1. Navigate to https://msc.fema.gov/portal/home

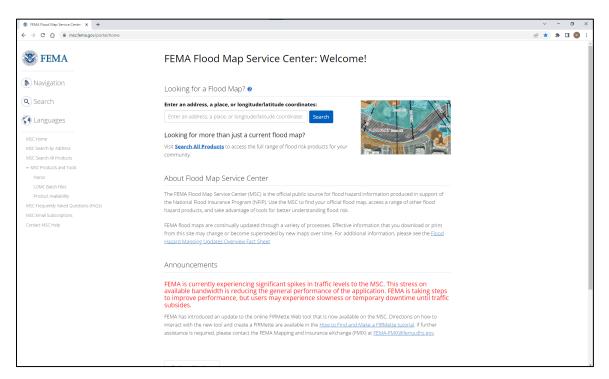


2. Enter an address or longitude/latitude in the Search Bar and select the *Search* button.

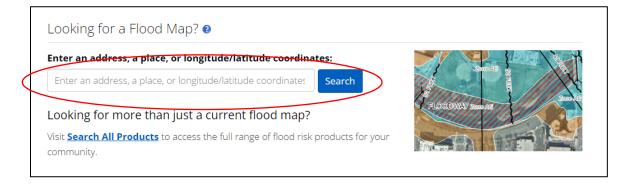

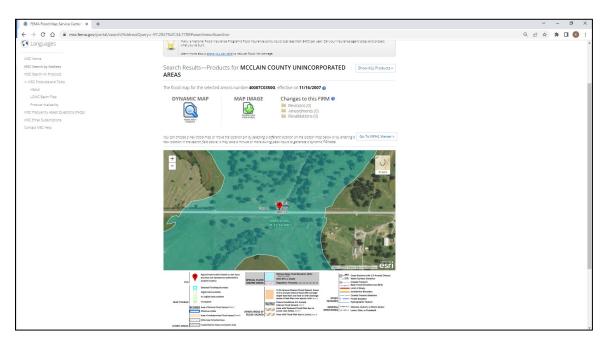

3. The Red Pin ($^{\blacklozenge}$) identifies the location to generate a FIRMette.

4. Take note of the FIRM Panel Number. It will be used in Step 8.

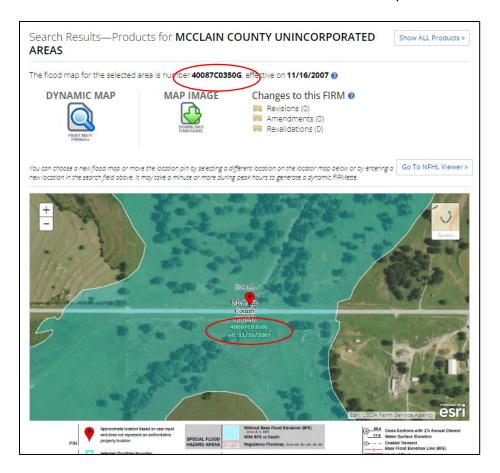


5. Click on Show All Products



6. Click on *Effective Products* to expand out the selection.



7. Click on FIRM Panels to expand out the selection.

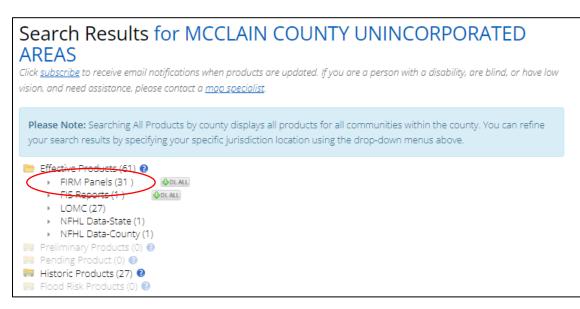


8. Locate the appropriate FIRM Panel Number under the Product ID column.

FIRM Panels (31)	OL ALL							
Please note: Searches often result in many map files listed under a given section. You can determine the Pro ID for the individual map panel needed by looking at the Map Index file. The index map files have "IND" within Product ID and appear at the start of the list. These index files show an overview of a jurisdiction and how it is subdivided into map panels with the Product ID for each panel shown.								
Show 100 v entries Showing 1 to 31 of 31 entries Previous								
Product ID	Effective Date	LOMC	Size	Download	View			
40087CINDOA	11/16/2007		1MB	ØDL	VIEW			
40087C0060G	11/16/2007	LOMC	1MB	⊘ DL	VIEW			
40087C0070G	11/16/2007	LOMC	ЗМВ	⊘ DL	VIEW			
40087C0080G	11/16/2007	LDMC	1MB	⊘ DL	VIEW			
40087C0090G	11/16/2007		5MB	⊘ DL	VIEW			
40087C0095G	11/16/2007		1MB	⊘ DL	VIEW			
40087C0115G	11/16/2007	LOMC	5MB	⊘ DL	VIEW			
40087C0120G	11/16/2007		1MB	⊘ DL	VIEW			
40087C0150G	11/16/2007	LOMC	1MB	⊘ DL	VIEW			
40087C0175G	11/16/2007	LOMC	4MB	⊘ DL	VIEW			
40087C0185G	11/16/2007	LOMC	4MB	⊘ DL	VIEW			
40087C0195G	11/16/2007	LOMC	5MB	⊘ DL	VIEW			
40087C0200G	11/16/2007	LOMC	2MB	⊘ DL	VIEW			
40087C0205G	11/16/2007		2MB	⊘ DL	VIEW			
40087C0215G	11/16/2007	LOMC	4MB	⊘ DL	VIEW			
40087C0250G	11/16/2007		2MB	⊘ DL	VIEW			
40087C0275G	11/16/2007		4MB	ØDL	VIEW			
40087C0300G	11/16/2007	LOMC	4MB	ØDL.	VIEW			
40087C0305G	11/16/2007	LOMC	4MB	⊘ DL	VIEW			
40087C0310G	11/16/2007		4MB	(DL)	VIEW			
40087C0325G	11/16/2007	LOMC	1MB	ØDL	VIEW			
40087C0350G	11/16/2007		2MB	⊘ DL	VIEW			
40087C0375G	11/16/2007		2MB	⊘ DL	VIEW			

9. Click the *View* button to open the FIRM Map Panel.


40087C0350G	11/16/2007	2MB	⊘ DL	VIEW

10. The FIRMette Web tool will open in a new window and display the FIRM Map Panel.

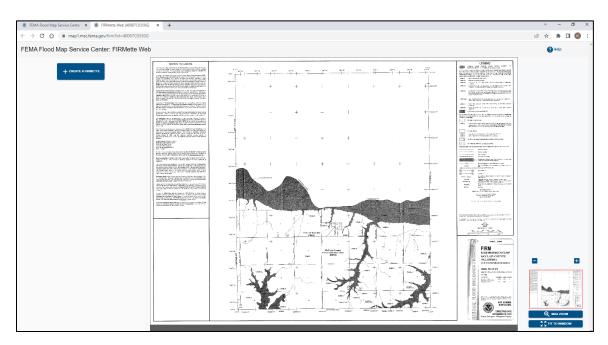


11. Click the *Create a Firmette* button.



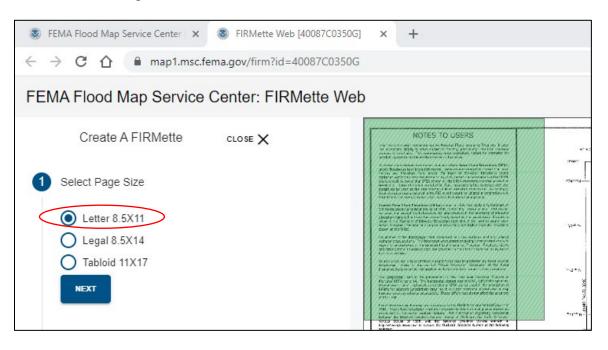

12. Select the Page Size, 8.5X11, and click Next.


13. Click, hold, and drag the green box over the area you want in your FIRMette and click *Next*.

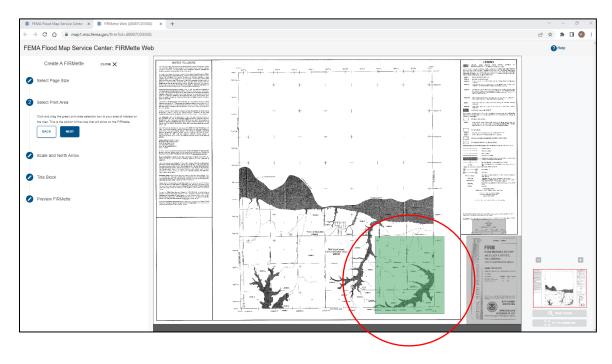




14. Click, hold, and drag the green box over the North Arrow and Scale and click *Next*.


15. Click, hold, and drag the green box over the Title Block and click Next.

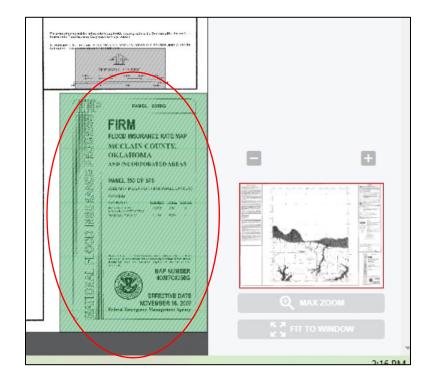


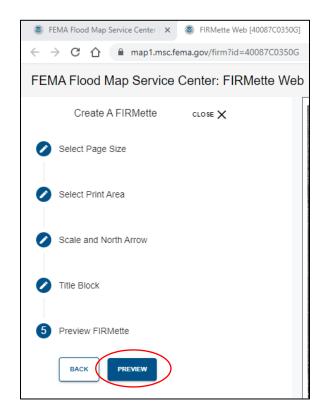

16. To preview the FIRMette, click the Preview button.


17. A Save Preview window will appear that shows a preview of the FIRMette.

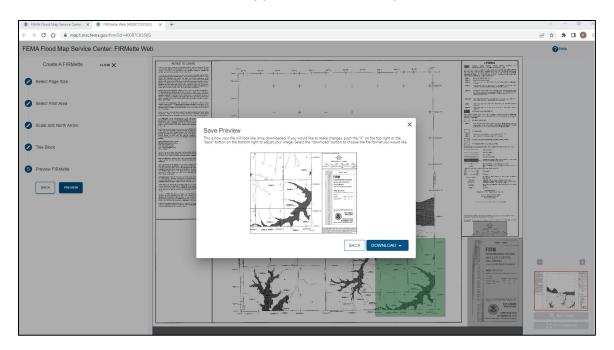

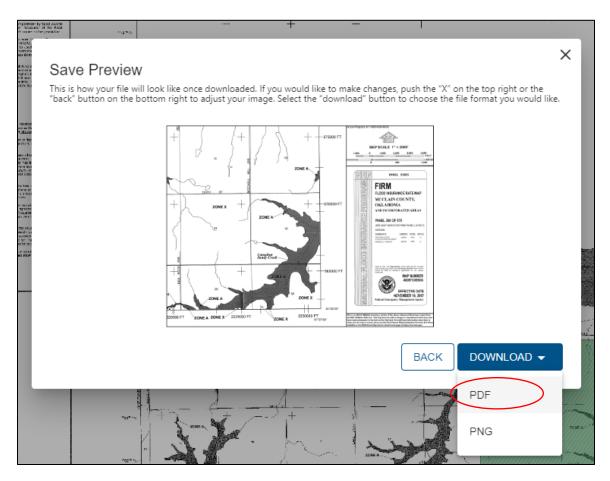

18. Select the *Download* button and click on *PDF*.

19. The FIRMette will download as a pdf.

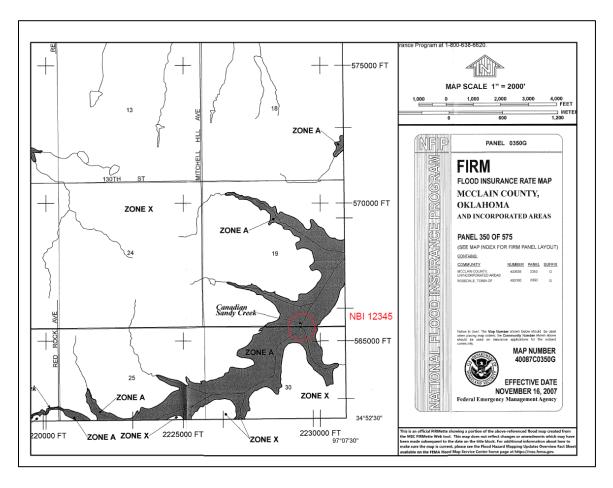


20. Place a red circle at the structure's location and label each location with the NBI#.

Option 3 – Using the FEMA's National Flood Hazard Layer (NFHL) Viewer


- 1. Navigate to <u>https://msc.fema.gov/nfhl</u>.

2. Enter an address or latitude/longitude in the Search Bar and select the Search button.

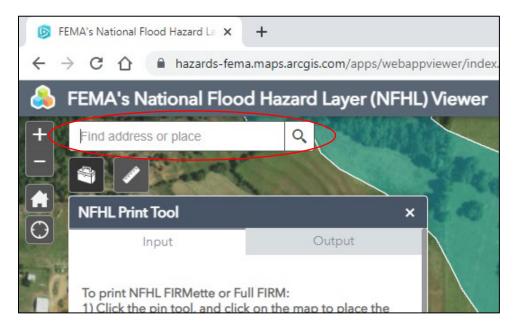



- 3. Select the point tool,
 - a. The mouse prompt shows the command to *Click to add a point*.

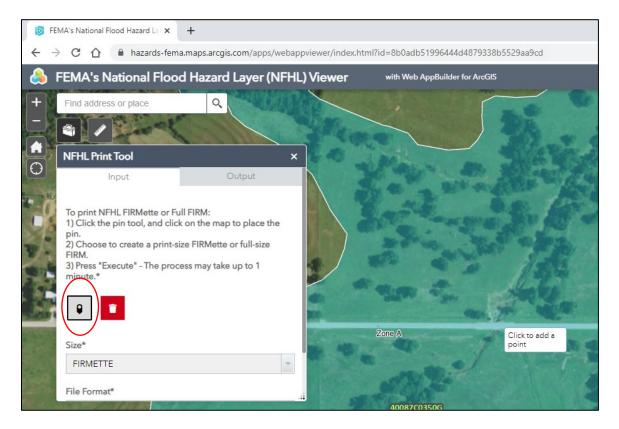

Left click on the site location.
a. Notice a red pin drop is placed.




- 5. In the NFHL Print Tool dialog box, select the following options:
 - a. Firmette b. PDF

	NFHL Print Tool ×
	pin. 2) Choose to create a print-size FIRMette or full-size FIRM. 3) Press "Execute" - The process may take up to 1 minute.*
	♀ ■
\langle	FIRMETTE
	File Format*
\langle	PDF
	Help Run


6. Click on Run

NFHL Print Tool ×
pin. 2) Choose to create a print-size FIRMette or full-size FIRM. 3) Press "Execute" - The process may take up to 1 minute.*
♀ 章 Size*
FIRMETTE
File Format*
PDF 👻
Help Run

7. Allow the site to process the request, then the following dialog box will appear:

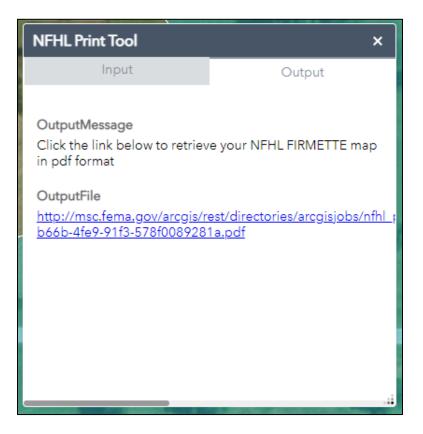

8. Select the Output File pdf link to download the file.

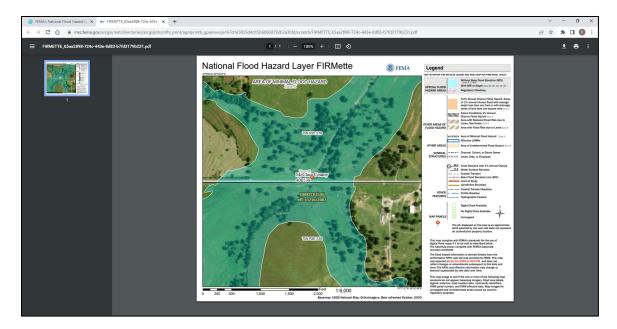

9. Place a red circle at the structure's location and label each location with the NBI#.

